

Maintenance, Service & Specifications

Section 12 - 5

12 VOLT PANEL BOARD CONNECTIONS						
CONN	BATT	PIN #	WIRE SIZE	COLOR	FUSE	HARNESS
J1	AUTO AUTO	1	10	WHT/RED	30	SUB/FLR STEP SUB/FLR STEP SW
		2	18	WHT/BLU	5	
		3-4-5-6-8	N/C			
		7	UNUSED			
J2	HOUSE	1	14	WHT/RED	5	ROOF SOLAR PNL
	HOUSE	2	14	WHT/BLU	15	ROOF LIGHTS
	HOUSE	3	14	WHT/ORG	15	ROOF AC & FANS
	HOUSE	4	14	WHT/BLK	15	ROOF BATH LTS
	HOUSE	5	14	WHT/YEL	15	ROOF DECOR LTS
		6	INDEX PIN			
	HOUSE	7	12	BLK	15	ROOF W PUMP
	HOUSE	8	14	WHT/BLU	5	ROOF LPG/DETECTOR
J3	HOUSE	1	14	WHT/BLK	15	S/F ENTRY SW.
	HOUSE	2	UNUSED			
	HOUSE	3	14	WHT/BRN	15	INTERIOR P/S LTS
		4	INDEX PIN			
	HOUSE	5	UNUSED			
	HOUSE	6	UNUSED			
	HOUSE	7	14	GRY	15	INTERIOR REFER
	HOUSE	8	14	PUR	15	INTERIOR FURNACE
J4	HOUSE	1	14	WHT/GRN	10	S/F STEREO
		2	INDEX PIN			
	HOUSE	3	18	RED		S/F BAT/DIS/SW-ON
	HOUSE	4	18	ORN		S/F BAT/DIS/SW-OFF
	HOUSE	5	18	BLK		S/F BAT/DIS/SW-COM
	AUTO	6	14	WHT/RED		S/F 12V IGN-HOT
	AUTO	7	18	WHT/YEL	5	S/F STEP O/R
	AUTO	8	10	WHT/BLU	30	S/F PWR/SEAT
P1 P4 P6 P7 P12 P14	HOUSE		14	WHT/GRN	5	S/F EM/STR/SW ROOF CO DETECTOR
	HOUSE		14	GRN	5	INTERIOR E.M.S.
	AUTO		14	WHT/ORG	10	S/F JACK CONTROL S/F EM/STR/SW

12-VOLT DC - FUSE IDENTIFICATION & SIZING
(Refer to Fuse Panel illustration for fusing locations)